

Installation Instructions

NLUD-OSCONT

Remote Control for NLUD with Motion Sensor

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.

REMOTE CONTROL KEY FUNCTION

SENSOR MODE (AUTO)

Press "Auto" button to initiate sensor mode.
(Note: Settings will remain the same as previously commissioned)

ON / OFF

Press "ON/OFF" button to turn luminaire on or off, motion sensor is disabled.
(Pressing "auto", "reset" or "scene setting" will disable On/Off mode)

SCENE SETTING (3 STEPS)

"Start" button starts the scene setting.

Press "Start" button for 2s till (●) Green LED is permanently on. Input all the desired settings by pressing buttons in each function zone. (●) Green LED will flicker once when settings are successfully applied.

"Memory" button saves the scene settings.

Press "Memory" button to save all settings. (●) Green LED will flicker once when settings are successfully applied.

"Apply" button copies the same settings to other sensors.


Point the remote control to other receiving sensors and press the "Apply" button for 2s. (●) Red LED will flicker and the receiving sensor will buzz when settings are successfully applied.

TESTING MODE (TEST)

Press "Test" button to put the luminaire in testing mode to set the desired detection range. When motion is detected, luminaire will turn on for 3 seconds. To exit testing mode, press On/Off, Reset or any other Hold Time.

HOLD TIME

Changes the length of time the luminaire will stay on after motion is not detected. After "Hold time" luminaire dims to "Dim Level" setting.

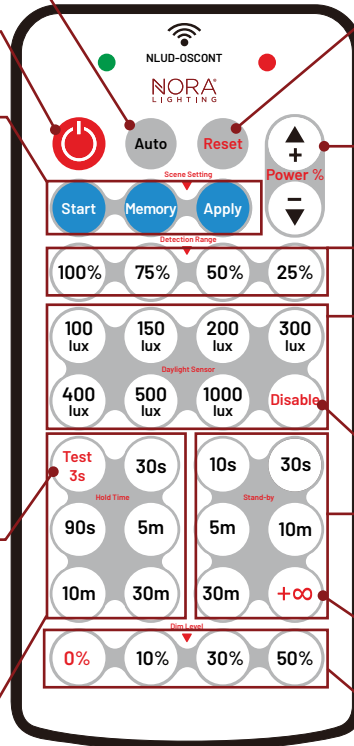

RESET

Press "Reset" button to return all settings to factory default.
(Default Settings: Detection Range = 100%, Daylight sensor = disabled, Hold time=30s, Stand-by= 30s, Dim level=50%)

POWER DIM +/-

Press "+" & "-" to dim the luminaire in 10% increments.
(60% - 70% - 80% - 90% - 100%)

DETECTION RANGE

Changes the sensitivity range of the sensor.

DAYLIGHT HARVESTING SETTING (DAYLIGHT SENSOR)

Sensor will allow luminaire to turn on when ambient light is below the desired lux level. If ambient lighting is at or above settings, luminaire will not turn on.

DISABLE

Disables daylight the daylight harvesting setting.

STAND-BY TIME

Changes the length of time luminaire stays at "Stand-by Dimming Level" after "Hold Time".

INFINITE STAND-BY

Keeps luminaire on "Stand-by Dimming Level".

STAND-BY DIMMING LEVEL

Brightness level of luminaire after "Hold time" setting.