

Installation Instructions

URGENT: READ PRIOR TO ATTEMPTING INSTALLATION

TRACK LIGHTING - CORI LED TRACK HEAD

ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION

Item#	Description	CCT	Beam Spread
NTE-840L30S12	12W Cori Track Head	3000K	15°
NTE-840L30F12	12W Cori Track Head	3000K	35°
NTE-840L42S12	12W Cori Track Head	4200K	15°
NTE-840L42F12	12W Cori Track Head	4200K	35°
NTE-840L30S23	23W Cori Track Head	3000K	15°
NTE-840L30F23	23W Cori Track Head	3000K	35°
NTE-840L42S23	23W Cori Track Head	4200K	15°
NTE-840L42F23	23W Cori Track Head	4200K	35°

INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN.

WARNING: Fire/Electrical Hazard

This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition to the National Electric Code and all applicable state and local building codes. The final installation must be approved by the appropriate qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

Installation Instructions

Note: LED Track Head comes ready to install right out of the box.

1. Turn off power from track before beginning installation.
2. Position circuit contact to correct position as track circuit. (Fig. 1)
3. Insert the fixture contacts into the track channel.
4. Turn the fixture clockwise until the contact head can be inserted into the track.
5. Push fixture straight into track, rotate contact head adapter clockwise until it locks into place. (Fig 2)
6. The polarity lines on both track and fixture are aligned.
7. Rotate fixture horizontally from mounting adapter and vertically from head.

Removal Instructions

1. To remove track head, pull mounting adapter sleeve down and turn counter clockwise 90°.

