

# Installation Instructions

## NTE-875 - MAC XL 18W AC LED Track Fixture

**READ PRIOR TO ATTEMPTING INSTALLATION**  
**ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION**  
**INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN**

Item #	Description	Color Temp.
NTE-875L27X18B NTE-875L27X18S NTE-875L27X18W	MAC XL AC LED Track Head	2700K
NTE-875L30X18B NTE-875L30X18S NTE-875L30X18W	MAC XL AC LED Track Head	3000K
NTE-875L40X18B NTE-875L40X18S NTE-875L40X18W	MAC XL AC LED Track Head	4000K

**⚠ IMPORTANT** - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

**⚠ IMPORTANT** - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.

### INSTRUCTIONS:

**NOTE: LED Track Head comes ready to install right out of the box.**

1. Turn off power to track before beginning installation.
2. Insert the fixture contacts into the track channel. (Figure 2)
3. Turn the fixture clockwise until the contact head can be inserted into the track.
4. Push fixture straight into track, rotate contact head adapter clockwise until it locks into place. (Figure 3)
5. The polarity lines on both track and fixture are aligned.
6. To aim, rotate fixture horizontally from mounting adapter and vertically from head.

### REMOVAL INSTRUCTIONS:

1. To remove track head, pull mounting adapter sleeve down and turn counter clockwise 90°.

### CHANGING THE BEAM ANGLE:

1. Twist open the front ring. (Figure 4)
2. Push out the optic from the ring. (Figure 5)
3. Replace the optic to the preferred beam angle.
4. Place the ring back and twist the ring to lock. (Figure 6)

