

# Installation Instructions

## NATL-877

### Remote Control for NATL-875

**READ PRIOR TO ATTEMPTING INSTALLATION**  
**ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION**  
**INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN**


**⚠ IMPORTANT** - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

**⚠ IMPORTANT** - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.

### SAFETY INFORMATION

1. Read all instructions carefully before you begin this installation.
2. When installing the battery, pay attention to the battery's positive and negative polarity.  
To save battery life, remove the batteries if remote will not be used for long period of time.  
If remote becomes unresponsive and requires a shorter distance between controller, replace both batteries.
3. If controller does not respond to remote, pair remote and controller again.
4. Handle remote control with care and avoid dropping.
5. For indoor and dry location use only.

### REMOTE CONTROL KEY FUNCTION

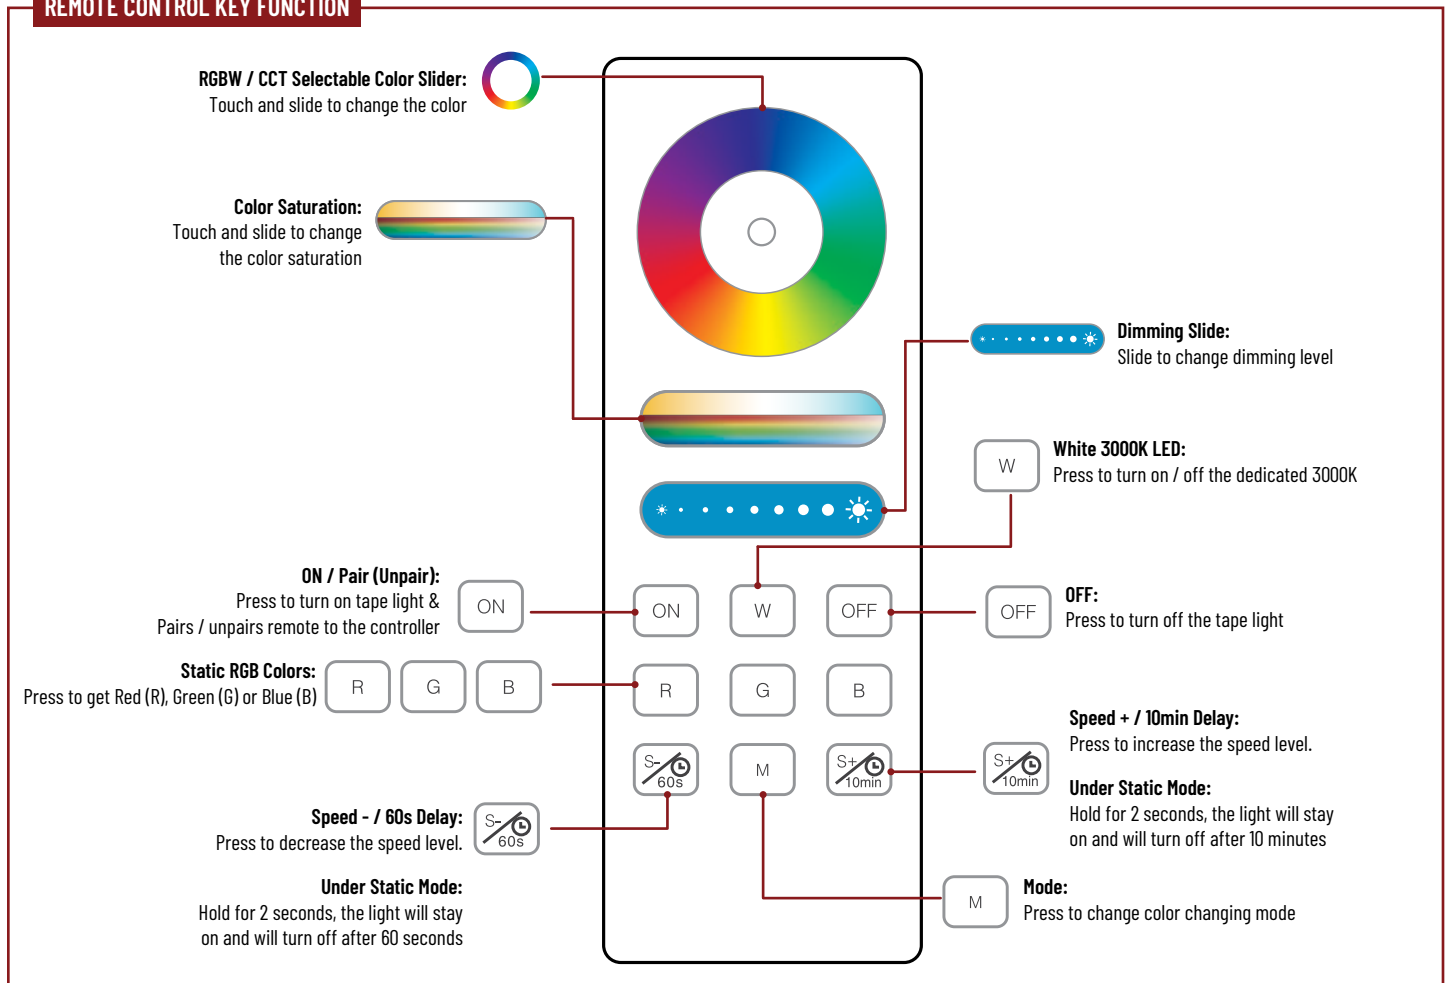

### PAIRING / UNPAIRING TO CONTROLLER(S) (SOLD SEPARATELY)

### REQUIRES: NATL-875 (ORDERED SEPARATELY)

#### PAIR USING "SET" BUTTON

1. Press "SET" button on controller then triple tap the "ON" button within 3 seconds on the remote.
2. Tape light will flash three times when pair is successful.

#### UNPAIRING USING "SET" BUTTON

1. Press "SET" button on controller then tap the "ON" button five times within 3 seconds on the remote.
2. Tape light will flash ten times when unpairing is successful.