READ PRIOR TO ATTEMPTING INSTALLATION ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

INSTALLATION INSTRUCTION

A TURN OFF MAIN POWER BEFORE INSTALLATION

Twist the TIR Optic counterclockwise to remove it from the housing

When adding/changing accessories, snap the accessory into the holder with the smooth side facing away from the Optic/LED

 
| ITEM | SIDE | ITEM NUMBER | DESCRIPTION |
|------|------|--------------|------------------|
| 1* | А | NAPL-3WIDE | Flood Lens |
| | | NAPL-3LINEAR | Linear Lens |
| | | NAPL-3DIFF | Diffused Lens |
| | | NAPL-3SQUARE | Square Lens |
| 2* | В | NAPL-3SOLITE | Solite Lens |
| | | NAPL-3HEX | Hex Louver |
| 3** | | | Accessory Holder |

- Lenses are designed for one side, they cannot be used on the opposite side of the holder. $\label{eq:lenses}$ Maximum one lens per side.
- Accessory holder is included with each lens or louver










SIDE B



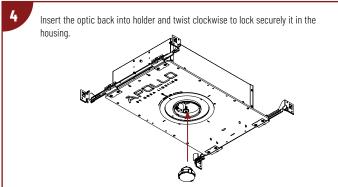

Page 1 of 1