

Installation Instructions

NIOP Series

iPOINT Monopoints


READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - THIS EQUIPMENT IS INTENDED TO BE INSTALLED ONLY BY QUALIFIED PERSONNEL. THE INSTALLATION MUST BE MADE IN ACCORDANCE WITH THE CURRENT EDITION OF THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE STATE AND LOCAL BUILDING CODES. THE FINAL INSTALLATION MUST BE APPROVED BY THE APPROPRIATE, QUALIFIED ELECTRICAL/BUILDING INSPECTOR(S). IMPROPER INSTALLATION MAY RESULT IN A FIRE OR ELECTRICAL HAZARD. BE SURE THE ELECTRICAL POWER TO THE CIRCUIT HAS BEEN DISCONNECTED BEFORE INSTALLING THIS ELECTRICAL SYSTEM.

⚠ IMPORTANT - CET ÉQUIPEMENT EST DESTINÉ À ÊTRE INSTALLÉ UNIQUEMENT PAR DU PERSONNEL QUALIFIÉ. L'INSTALLATION DOIT ÊTRE FAITE CONFORMÉMENT À L'ÉDITION ACTUELLE DU CODE NATIONAL DE L'ÉLECTRICITÉ ET À TOUS LES CODES DE CONSTRUCTION LOCAUX ET NATIONAUX APPLICABLES. L'INSTALLATION FINALE DOIT ÊTRE APPROUVÉE PAR UN OU PLUSIEURS INSPECTEURS QUALIFIÉS EN ÉLECTRICITÉ / BÂTIMENT. UNE INSTALLATION INCORRECTE PEUT ENTRAÎNER UN INCENDIE OU UN RISQUE ÉLECTRIQUE. ASSUREZ-VOUS QUE L'ALIMENTATION ÉLECTRIQUE DU CIRCUIT A ÉTÉ DÉCONNECTÉE AVANT D'INSTALLER CE SYSTÈME ÉLECTRIQUE.

INSTALLATION

1. Make sure power is off. **⚠ IMPORTANT:** Connector is not intended to support weight of the fixture. Please support fixture at all times.
2. Connect luminaire to quick connect of Nora's Iolite LED housing.
3. Squeeze friction blades on luminaire, route wires into the housing and push monopoint flush against ceiling.
4. Turn power back on.

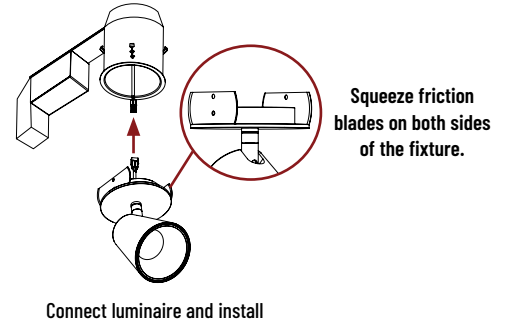

CHANGING INSERT AND/OR OPTIC

1. Remove reflector insert by turning counter-clockwise.
2. If needed, replace optic from socket.
3. Replace reflector insert with desired finish.

