

Installation Instructions

NLINSW-RMB

Thread Rod Mounting Brackets for NLIN & NLINSW


READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition to the National Electric Code and all applicable state and local building codes. The final installation must be approved by the appropriate qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite en conformité avec l'édition actuelle du Code national de l'électricité et toutes étatiques et locales codes du bâtiment applicables. L'installation finale doit être approuvée par l'inspecteur en électricité / bâtiment qualifié approprié(s). Une mauvaise installation peut entraîner un incendie ou un risque électrique. Soyez sûr de la puissance électrique vers le circuit a été coupée avant l'installation de ce système électrique.



PACKAGING CONTENTS



(2) Mounting Brackets




Allen Key

INSTALLATION INSTRUCTIONS

1

Insert threaded rod and secure with two hex nuts (not included) on both ends.

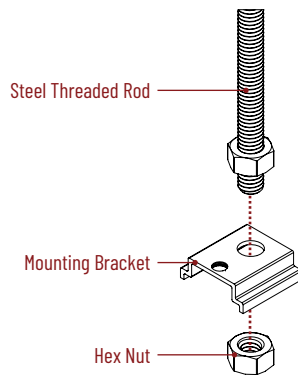

Steel Threaded Rod


Mounting Bracket

Hex Nut

NOTE: 5/16" steel threaded rod not included
NOTE: Hex nut maximum height is 7/16"

2


Remove end cap from led luminaire and insert mounting bracket into channel.

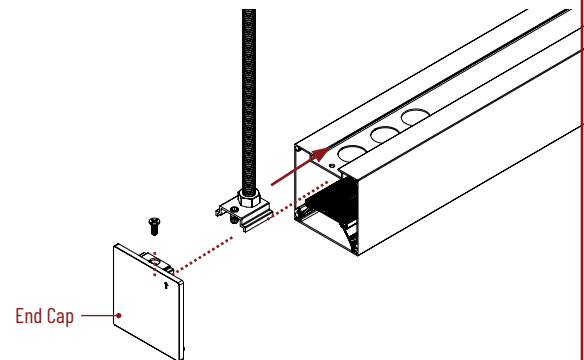

End Cap

3

Tighten set screw on mounting bracket to secure location, and replace end cap.

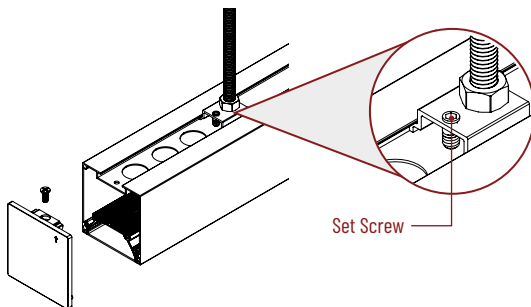


Set Screw

NOTE: Refer to recommended installation locations for mounting bracket position.
NOTE: Set screws must sit on the body, not on the knockout.

4

Repeat previous steps with the second bracket to complete installation.

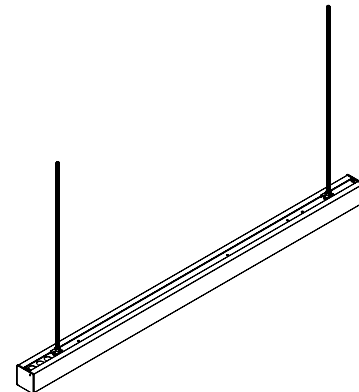

Installation Instructions


NLINSW-RMB

Thread Rod Mounting Brackets for NLIN & NLINSW


READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

RECOMMENDED LOCATIONS


NLINSW-2

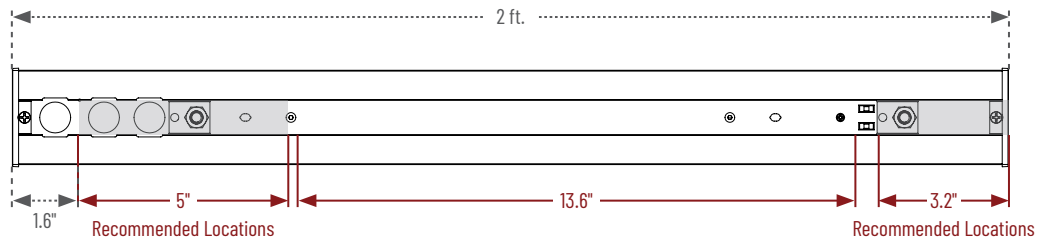

NLINSW-4

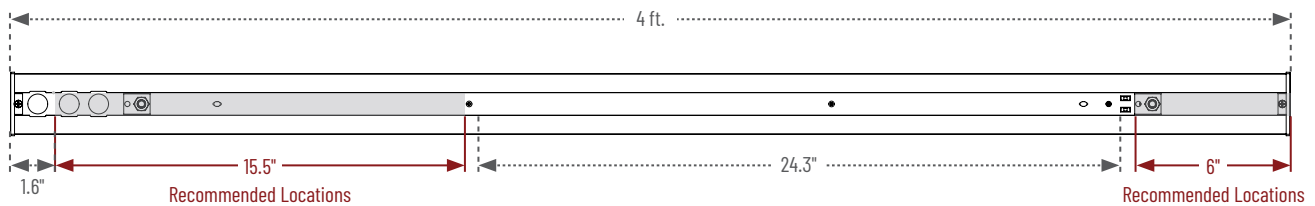

NLINSW-8

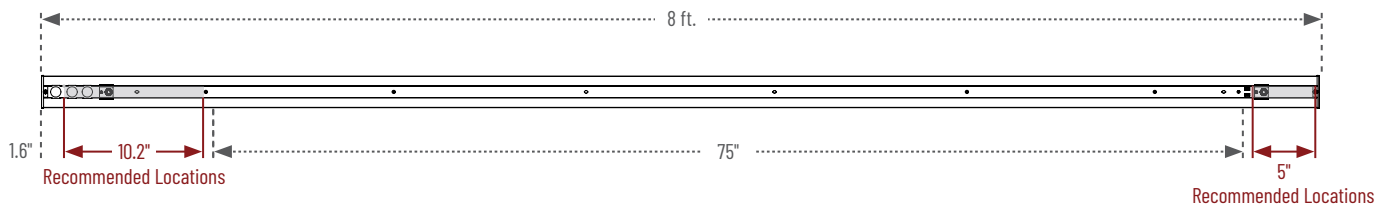

NOTE: Set screws sit on the body, not on the knockout

