

Installation Instructions

NLINSW-TMB

T-Bar Mounting Brackets for NLIN & NLINSW


READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition to the National Electric Code and all applicable state and local building codes. The final installation must be approved by the appropriate qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite en conformité avec l'édition actuelle du Code national de l'électricité et toutes étatiques et locales codes du bâtiment applicables. L'installation finale doit être approuvée par l'inspecteur en électricité / bâtiment qualifié approprié(s). Une mauvaise installation peut entraîner un incendie ou un risque électrique. Soyez sûr de la puissance électrique vers le circuit a été coupée avant l'installation de ce système électrique.



PACKAGING CONTENTS

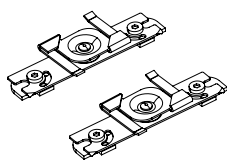

(2) 15/16" T-Bar Brackets




(4) Set Screws




Allen Key

COMPATIBLE CEILING PANEL TYPES

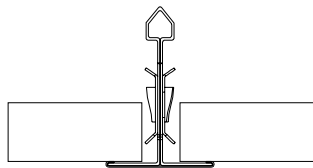


Square Edge

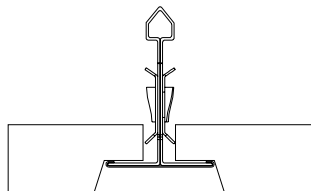


Tegular Edge

DIMENSIONS

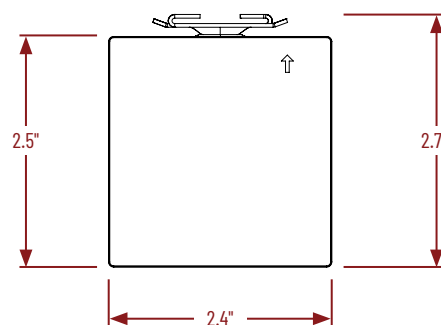

L-Line LED Luminaire w/ T-bar brackets installed

LUMINAIRE MOUNTING EXAMPLES

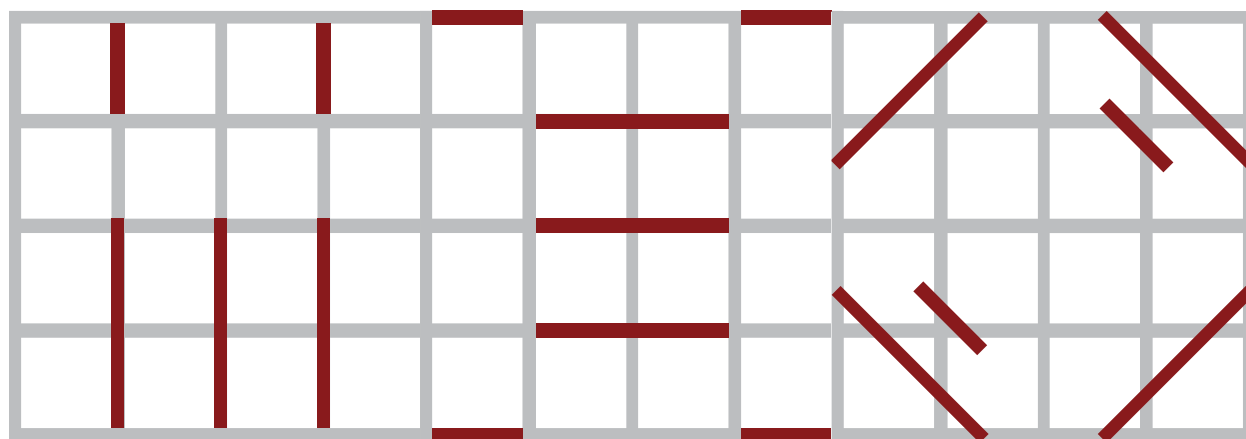

Vertical

Horizontal

Diagonal

Installation Instructions


NLINSW-TMB

T-Bar Mounting Brackets for NLIN & NLINSW

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN


INSTALLATION INSTRUCTIONS

- 1** Insert T-Bar brackets into the channel of the linear body.
Optional: End cap with hole can be used as an alternative for side feed.

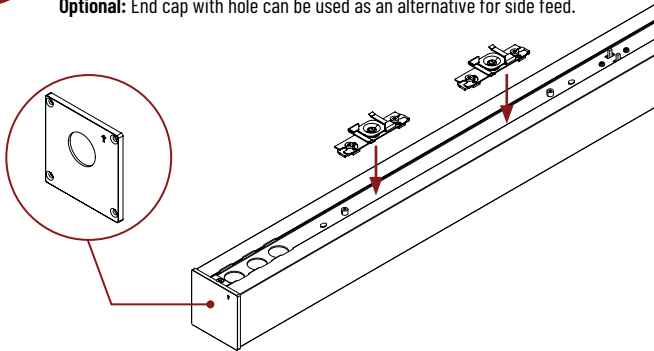

NOTE: Refer to Recommended Installation Locations for T-bar bracket position.


- 2** Rotate channel locks and tighten set screws to secure to the linear body using allen key (included).

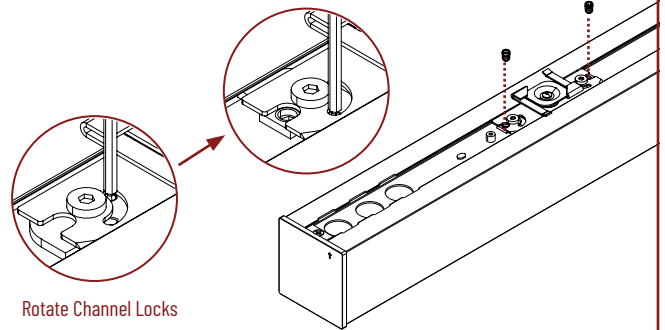


Rotate Channel Locks

NOTE: Set screws sit on the body, not on the knockout.

- 3** Turn the clips to attach the T-bar ceiling.

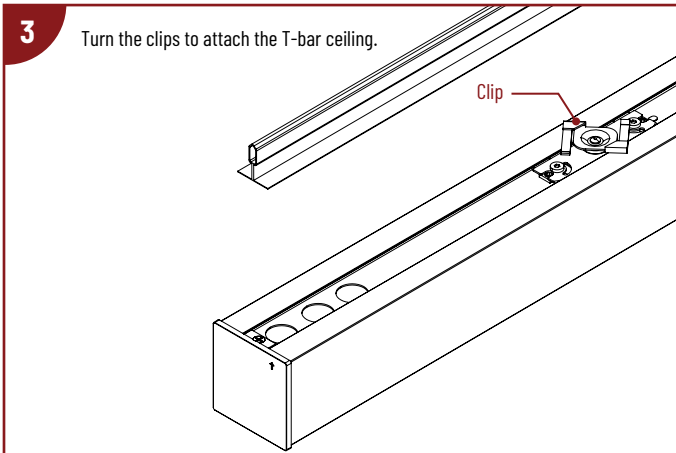


- 4** Place linear luminaire under T-bar ceiling.

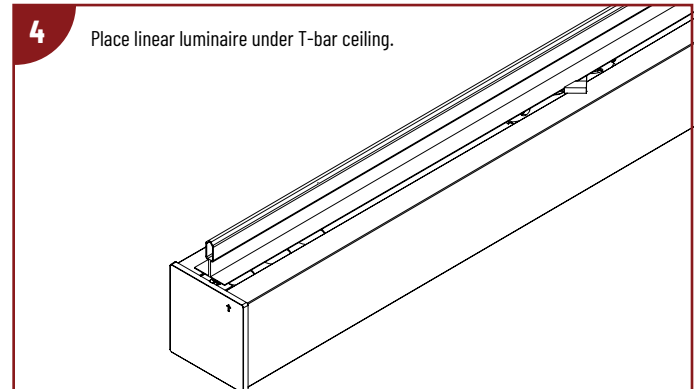


NOTE: Recommended to move both ceiling tiles during installation.

- 5** Turn clips to lock the linear luminaire with T-bar ceiling.

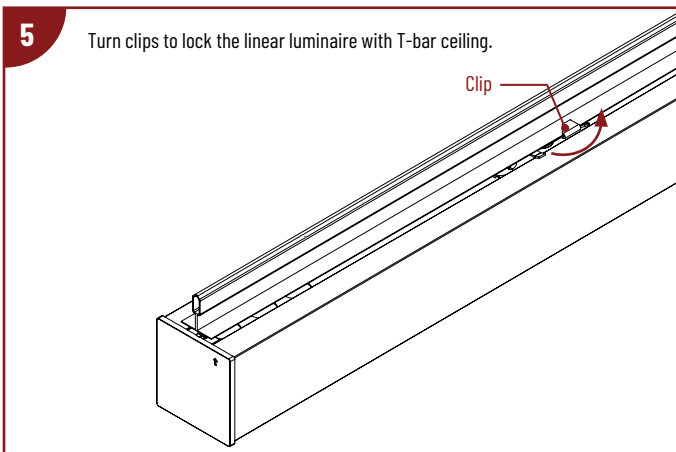

- 6** Installation Complete.

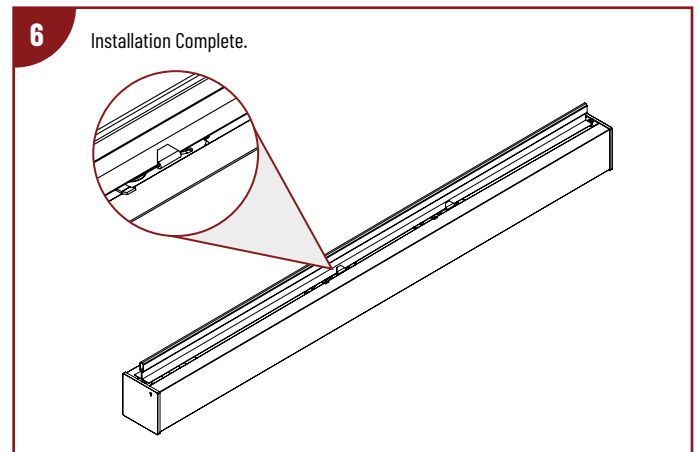

Installation Instructions


NLINSW-TMB

T-Bar Mounting Brackets for NLIN & NLINSW


READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

RECOMMENDED LOCATIONS

NLINSW-2

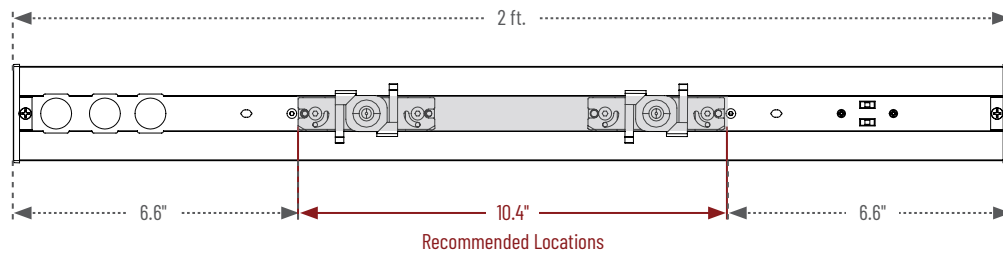

NLINSW-4

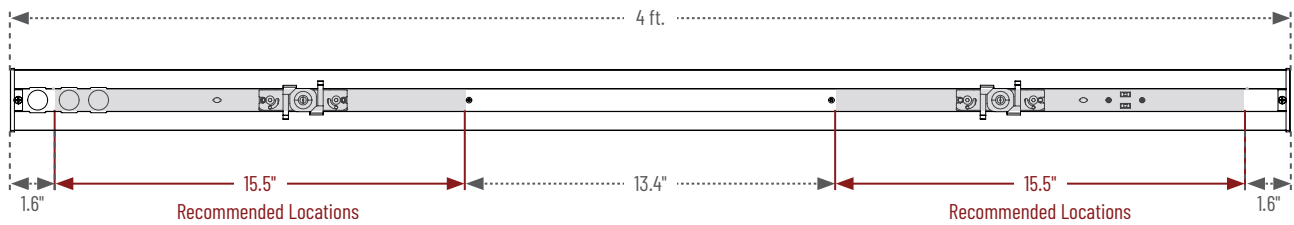

NLINSW-8

