

# Installation Instructions

NAP-TLMR-3R

Round Trimless Mud Plate for 3" Apollo

**READ PRIOR TO ATTEMPTING INSTALLATION**  
**ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION**  
**INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN**

**⚠ IMPORTANT** - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.


**⚠ IMPORTANT** - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.

COMPATIBLE HOUSING	DESCRIPTION	INSTRUCTION SHEET
NHAPIC-3R	3" Apollo Round IC Air-Tight Housing with Field Changeable Optic	<a href="#">Link</a>
NHAPNIC-3R	3" Apollo Round IC Air-Tight Housing with Fixed Optic	<a href="#">Link</a>


## INSTALLATION INSTRUCTIONS

**1** Adjust collar height, leave 6mm (1/4") gap from the bottom of the ceiling to bottom of the collar. Tighten set screws to fix collar height in place.  
**(NOTE:** Collars have two set screw positions, depending on ceiling thickness)


**⚠ CAUTION:** Ensure proper collar range is installed, if improper collar range is installed, remove existing collar by unscrewing the collar out.

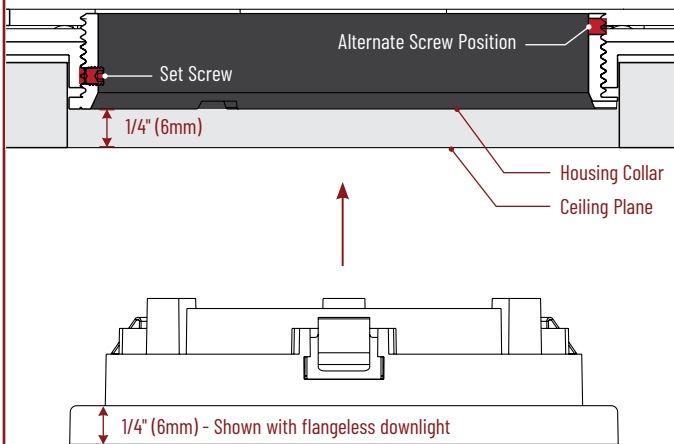


**2** Before installation, adjust LED mechanism to desired position. Refer to housing instruction sheet for more information.

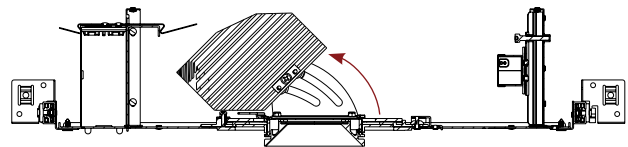


**3** Align the mud ring tabs to the housing's collar notches. Fasten mud ring to drywall using #8 self tapping / drywall sheet metal screws. (not provided)

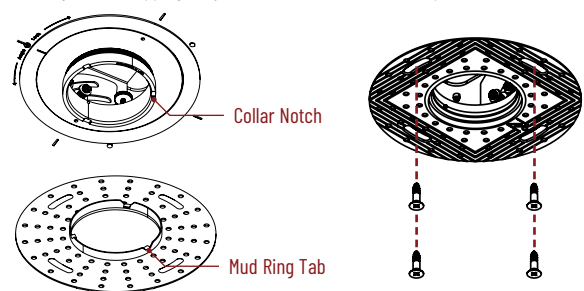

**4** Replace cardboard cover into mud plate.

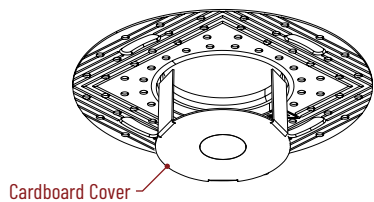

**5** A professional drywall finisher should complete mud in.

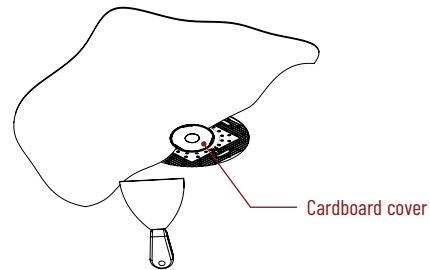

# Installation Instructions

NAP-TLMR-3R

Round Trimless Mud Plate for 3" Apollo

READ PRIOR TO ATTEMPTING INSTALLATION  
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION  
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

## INSTALLATION INSTRUCTIONS (CONTINUED)

- 6** Allow paint to dry and carefully remove cardboard cover. Insert trimless into mud plate, making sure it snaps flush to the ceiling plane. Installation is complete.

