

Installation Instructions

NAP-TLMR-3S

Square Trimless Mud Plate for 3" Apollo

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.


⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.

COMPATIBLE HOUSING	DESCRIPTION	INSTRUCTION SHEET
NHAP-3S	3" Apollo Square Non-IC Air-Tight Housing with Field Changeable Optic	Link
NHAPIC-3S	3" Apollo Square IC Air-Tight Housing with Field Changeable Optic	Link
NHAPNIC-3S	3" Apollo Square IC Air-Tight Housing with Fixed Optic	Link


INSTALLATION INSTRUCTIONS

1 Adjust collar height, leave 6mm (1/4") gap from the bottom of the ceiling to bottom of the collar. Tighten (4) set screws to fix collar height in place. A spacer tool is included with housing to assist with installation.


⚠ CAUTION: Ensure proper collar range is installed, if improper collar range is installed, loosen (4) set screws to remove existing collar.

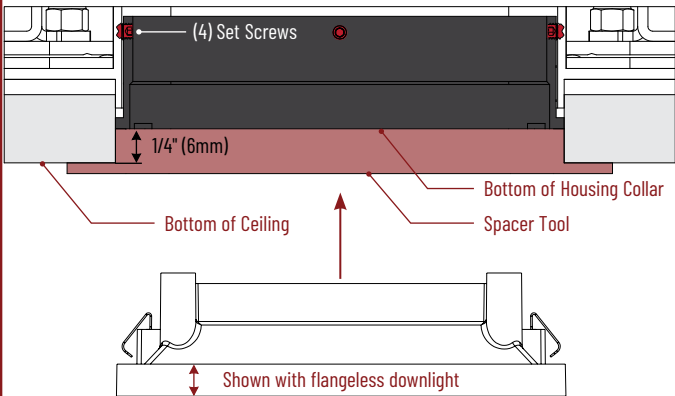


2 The ceiling cut out for a square trimless mud plate is 3-1/2" x 3-1/2".

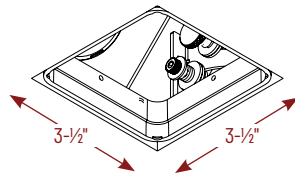


3 Before mud plate installation, adjust LED mechanism to desired position. Refer to housing instruction sheet for more information.

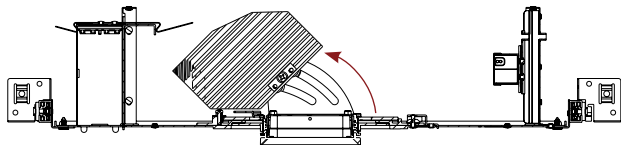

4 Fasten mud ring to drywall using #8 self tapping / drywall sheet metal screws. (not provided)

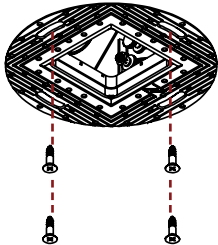

5 Replace cardboard cover into mud plate.

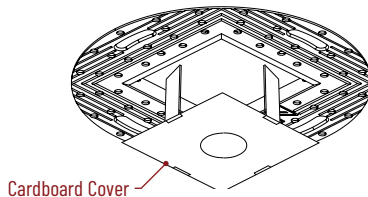

Installation Instructions


NAP-TLMR-3S

Square Trimless Mud Plate for 3" Apollo

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

INSTALLATION INSTRUCTIONS (CONTINUED)

- 6** A professional drywall finisher should complete mud in.

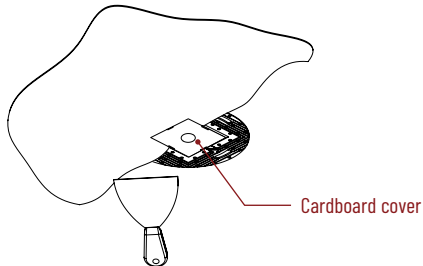

- 7** Allow paint to dry and carefully remove cardboard cover. Insert trimless into mud plate, making sure it snaps flush to the ceiling plane. Installation is complete.

