

Installation Instructions

NAPT-3SWW

3" Apollo Square Trimless & Wood Ceiling Wall Wash

READ PRIOR TO ATTEMPTING INSTALLATION

ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION

INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN


⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.


COMPATIBLE HOUSING	DESCRIPTION	INSTRUCTION SHEET
NHAP-3S	3" Apollo Square Non-IC Air-Tight Housing with Field Changeable Optic	Link
NHAPIC-3S	3" Apollo Square IC Air-Tight Housing with Field Changeable Optic	Link
NHAPNIC-3S	3" Apollo Square IC Air-Tight Housing with Fixed Optic	Link

INSTALLATION INSTRUCTIONS


- 1
- If applicable, install trimless mud plate (NAP-TLMR-3S), mud in and allow paint to dry. Remove cardboard cover from mud plate. Refer to [trimless mud plate instruction sheet](#) for more information.

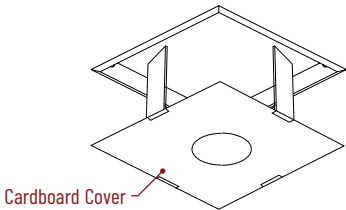

- 2
- Before installation, adjust LED mechanism to 45° position. Refer to housing instruction sheet for more information.

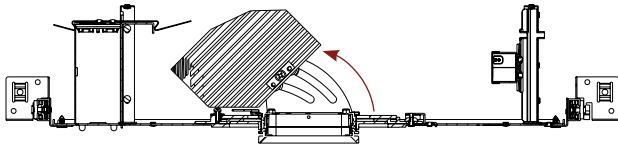

- 3
- Insert trim into collar of housing, making sure it snaps flush to the ceiling plane. Installation is complete.

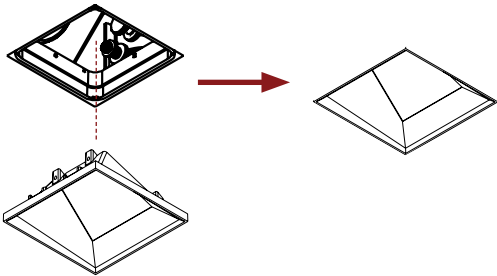

- 4
- If trim is not flush to the ceiling, ensure the housing collar is 1/4" (6mm) from the ceiling plane. Loosen the set screws inside the housing collar, adjust the collar accordingly, and tighten the set screws to lock its position. A spacer tool is included with housing to assist with installation.

