

Installation Instructions

NPR-4RTLND

4" Pearl 120V LED Round Trimless Retrofit Downlight

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ WARNING: Risk of fire or electric shock. Installation of this retrofit assembly requires a person familiar with the construction and operation of the luminaire's electrical system and the hazard involved. If not qualified, do not attempt installation. Contact a qualified electrician.

⚠ WARNING: Risk of fire or electric shock. Install this kit only in the luminaires that has the construction features and dimensions shown in the photographs and/or drawings.

⚠ WARNING: To prevent wiring damage or abrasion, do not pinch or damage expose wiring during installation. Keep away from to edges of sheet metal or other sharp objects

⚠ WARNING: Risk of fire or electric shock. Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical component.

DO NOT MAKE OR ALTER ANY OPEN HOLES IN AN ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS DURING KIT INSTALLATION.

THIS RETROFIT KIT IS ACCEPTED AS A COMPONENT OF A LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY AUTHORITIES HAVING JURISDICTION.

⚠ AVERTISSEMENT: Risque d'incendie ou de choc électrique. L'installation de cet ensemble de rénovation nécessite une personne familiarisée avec la construction et le fonctionnement du système électrique du luminaire et les risques encourus. S'il n'est pas qualifié, n'essayez pas d'installer. Contacter un électricien qualifié.

⚠ AVERTISSEMENT: Risque d'incendie ou de choc électrique. Installez ce kit uniquement dans les luminaires qui ont les caractéristiques de construction et les dimensions indiquées sur les photographies et / ou les dessins.

⚠ AVERTISSEMENT: Pour éviter d'endommager ou d'abrasion le câblage, ne pas pincer ou endommager le câblage pendant l'installation. Tenir à l'écart des bords de la tôle ou d'autres objets tranchants

⚠ AVERTISSEMENT: Risque d'incendie ou de choc électrique. Ne modifiez pas, ne déplacez pas ou n'enlevez pas le câblage, les douilles de lampe, l'alimentation électrique ou tout autre composant électrique.



PACKAGING CONTENTS




Trim



Male Ideal[®]
Quick Connect



LED Lamp Replacement
Marking Sticker



Pearl LED module/retrofit kit
Flood optic (N10-REFL60) installed



Medium Base
Socket Adapter



Narrow Flood Optic
(N10-REFL38)



Spot Optic
(N10-REFL25)




HOUSING DIMENSIONS

Refer to correlation label of luminaire and/or specification sheet at <https://noralighting.com/npr-4rtlndc>


Install this kit only in luminaires that have the construction features and dimensions described in these instructions, and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

Max. Number of 12AWG through branch wiring: 8

	4" Housing Dimensions	6" Housing Dimensions
Width	4.03"	6.05"
Height	5.50"	5.51"

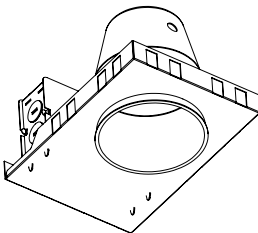

New Construction

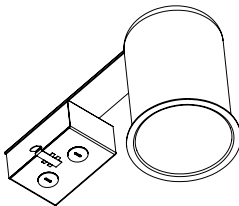

Remodel

Installation Instructions

NPR-4RTLND


4" Pearl 120V LED Round Trimless Retrofit Downlight

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN



INSTALLING DESIRED OPTIC

NOTE: FLOOD OPTIC IS PRE-INSTALLED

- 1 Pull pre-installed flood optic from heat sink.

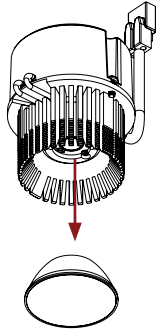


- 2 Align desired optic to module and push the optic into place.

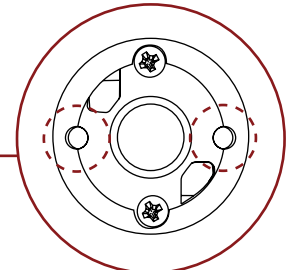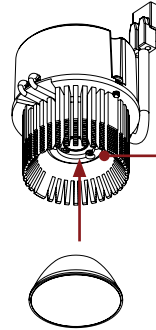

Align optic feet to module

- 3 Attach LED module/driver and optic onto trim by threading heatsink.

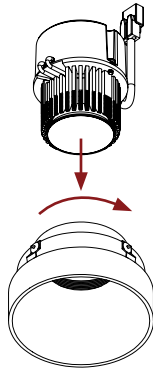


INSTALLATION INTO LED HOUSINGS

REQUIRES: NPR-TLMR-4R OR NPR-TLMR-6R

⚠️ TURN OFF MAIN POWER BEFORE INSTALLATION

- 1 ⚠️ **IMPORTANT:** Connector is not intended to support weight of the fixture. Please support fixture at all times. Make sure power is off, mud ring (ordered separately) is installed and plaster is dry. Connect orange male connector to female connector of compatible housing listed on the correlation label.

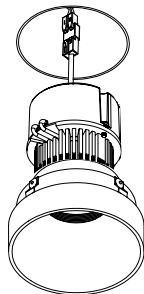

- 2 Insert trim into mud ring, make sure it snaps flush. Turn power back on.

