

Installation Instructions

NPR-TLMR-6R

6" to 4" Conversion Trimless Mud Ring for Pearl

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ IMPORTANT - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.


COMPATIBLE TRIMLESS	DESCRIPTION
NPR-4RTLA	4" 120V Pearl Round Trimless Adjustable Retrofit
NPR-4RTLND	4" 120V Pearl Round Trimless Retrofit Downlight
NPR-4RTSLA	4" 120V Pearl Round Trimless Adjustable Slot Retrofit
NPRLV-4RTLA	4" 12V Pearl Round Trimless Adjustable Retrofit
NPRLV-4RTLND	4" 12V Pearl Round Trimless Retrofit Downlight
NPRLV-4RTSLA	4" 12V Pearl Round Trimless Adjustable Slot Retrofit

⚠ IMPORTANT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite conformément à l'édition actuelle du Code national de l'électricité et à tous les codes de construction locaux et nationaux applicables. L'installation finale doit être approuvée par un ou plusieurs inspecteurs qualifiés en électricité / bâtiment. Une installation incorrecte peut entraîner un incendie ou un risque électrique. Assurez-vous que l'alimentation électrique du circuit a été déconnectée avant d'installer ce système électrique.


COMPATIBLE 12V LED MODULES	COMPATIBLE 120V LED MODULES	COLOR TEMPERATURE
NPRLV-FLED10927X	NPR-FLED10927X	2700K
NPRLV-FLED10930X	NPR-FLED10930X	3000K
NPRLV-FLED10935X	NPR-FLED10935X	3500K
NPRLV-FLED10940X	NPR-FLED10940X	4000K
	NPR-FLED89CD2X	Comfort Dim (3000K-2000K)

INSTALLATION INSTRUCTIONS


- 1** Align mud ring to opening. squeeze friction blades on mud ring, and push mud ring flush against ceiling.

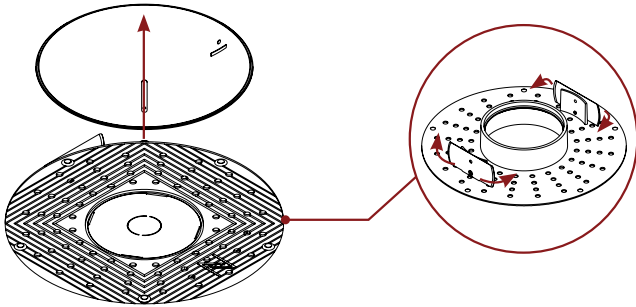

- 2** Fasten mud ring to drywall using #8 self tapping drywall/sheet metal screws. (screws not included)

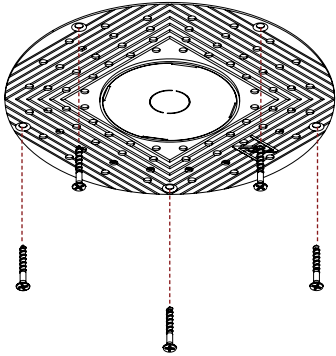

- 3** A professional drywall finisher should complete mud in.

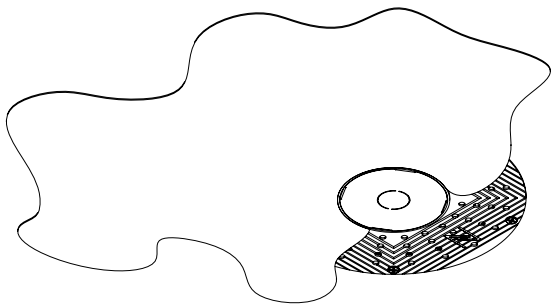

- 4** Allow paint to dry and carefully remove cover. Refer to trim installation instructions to complete installation.

